 




Fig. 1a

Jøtul F 130 Series


Jøtul F 134 (with base / without sideglases)

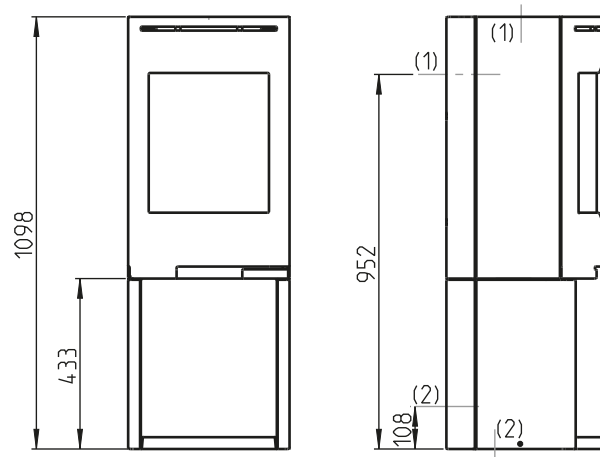

  
Jøtul F 136 (with pedestal without sideglases)

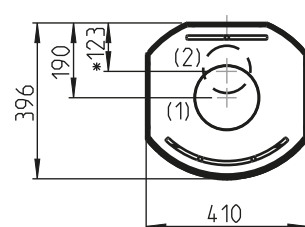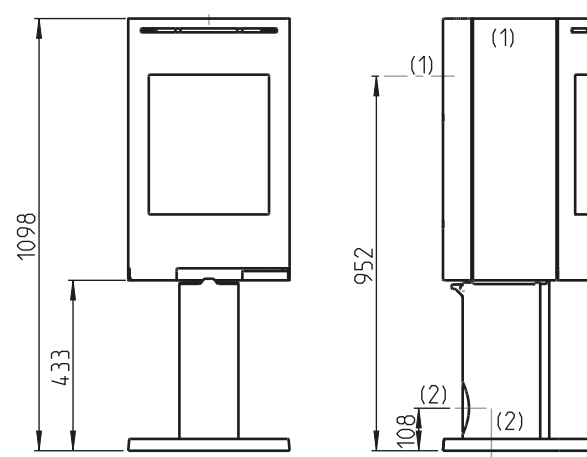

 - (1) - Flue pipe center
(2) - Outside air connection center

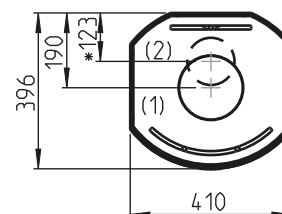



Floor plate

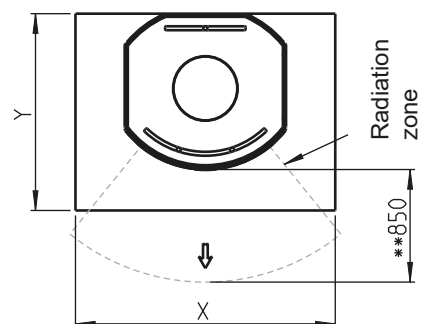 

Min. measurements floorplate
X / Y = According to national laws and regulations

Combustible wall

  Min. distance to combustible wall

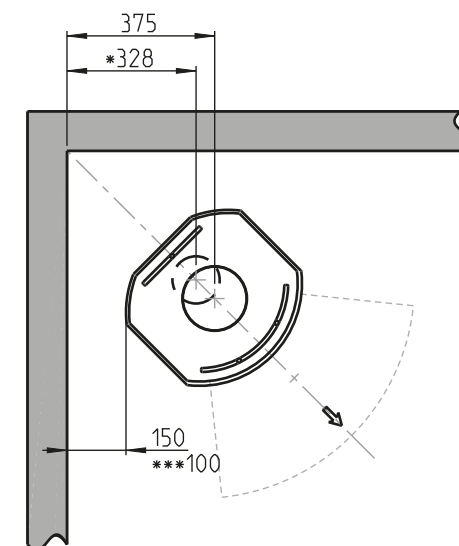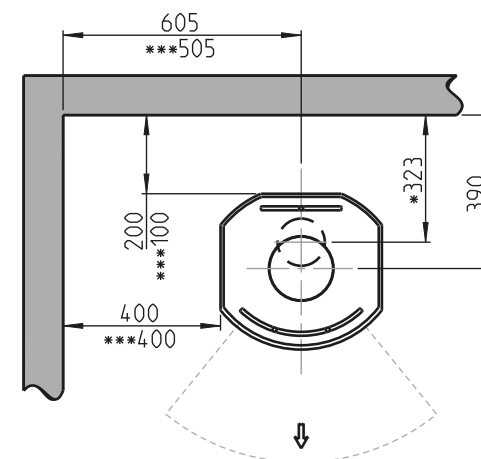

* Outside air connection

** Min. distance to furniture / combustible material


*** Distance to combustible wall with semi-insulated / shielded flue pipe

Fig. 1b


Jøtul F 130 Series

Jøtul F 134 / F 136 - min. distance to firewall

 External

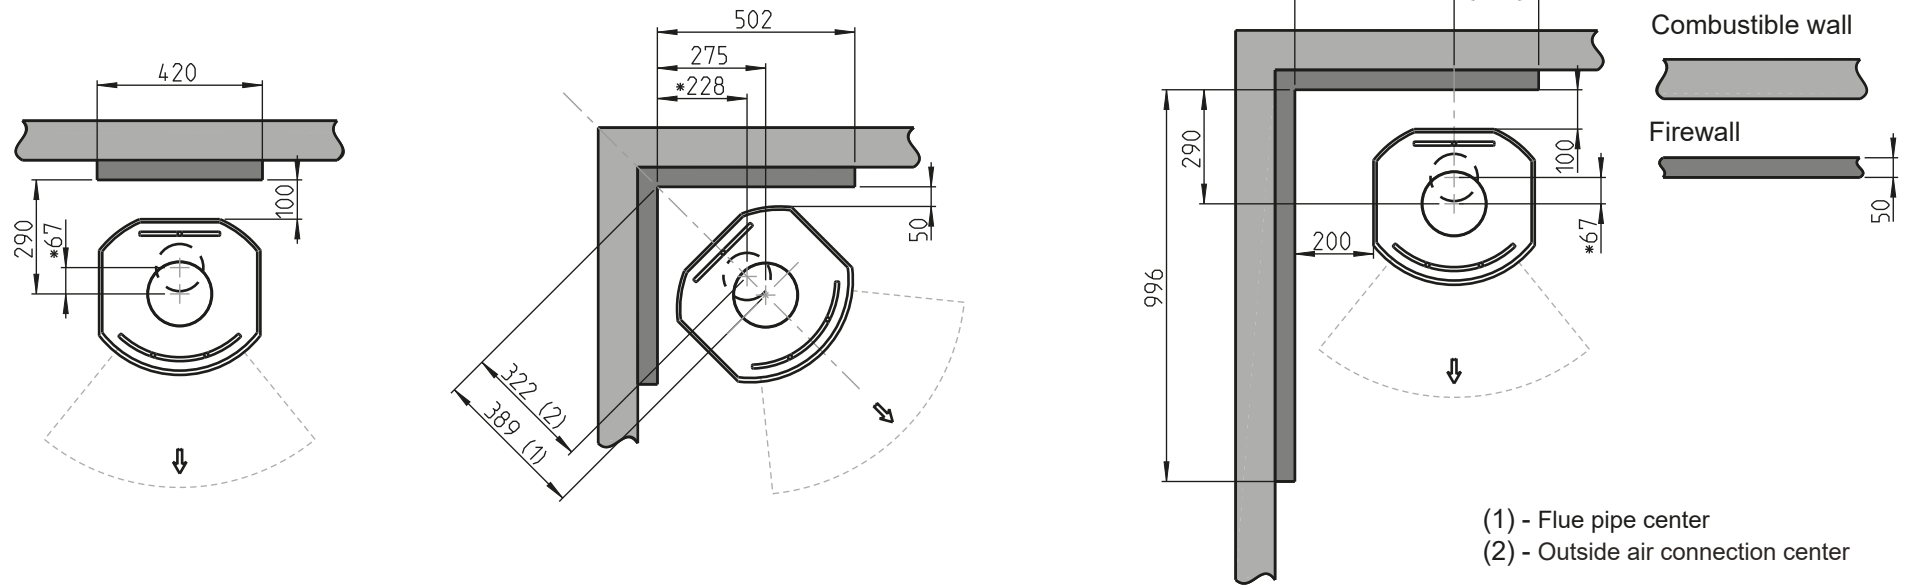

Integrated

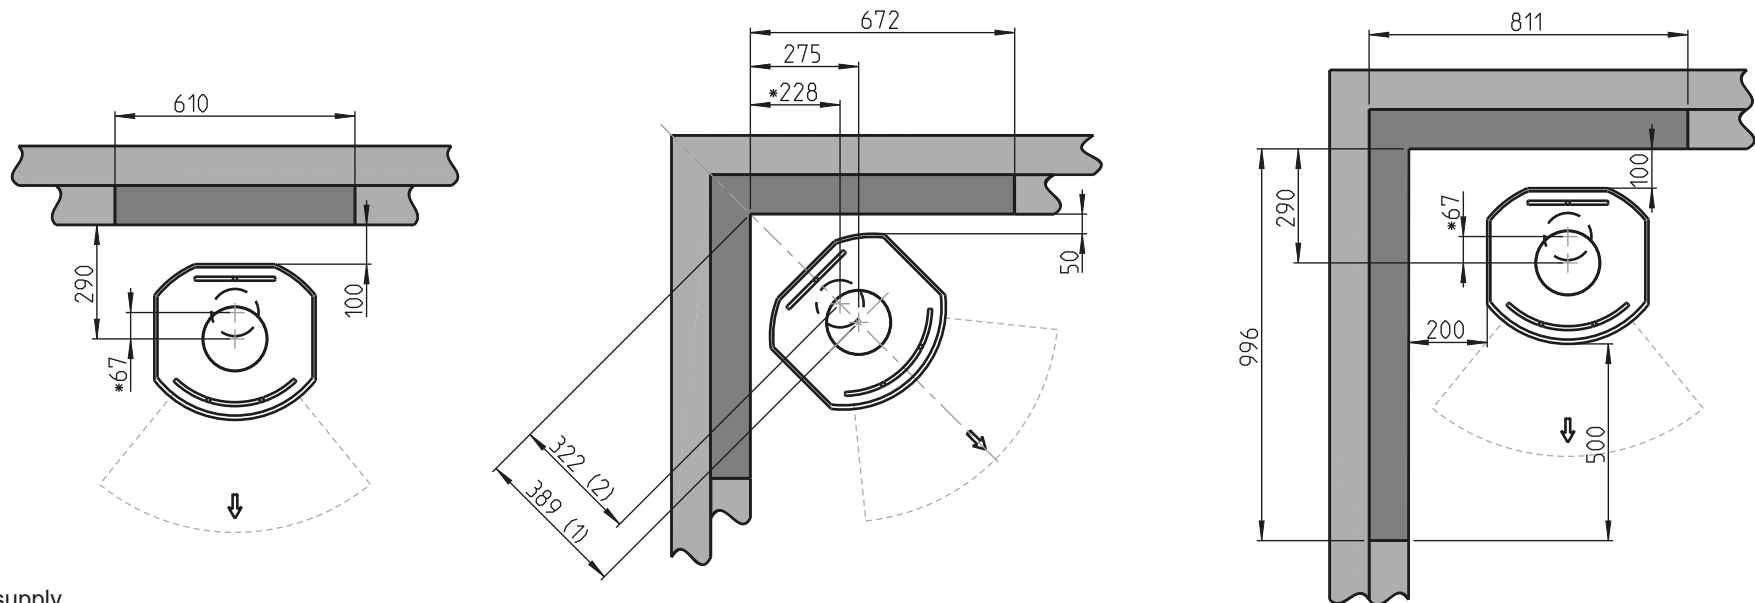 


* External air supply


Fig. 1c

Jøtul F 130 Series

 Jøtul F 135 (with base and sideglasses)

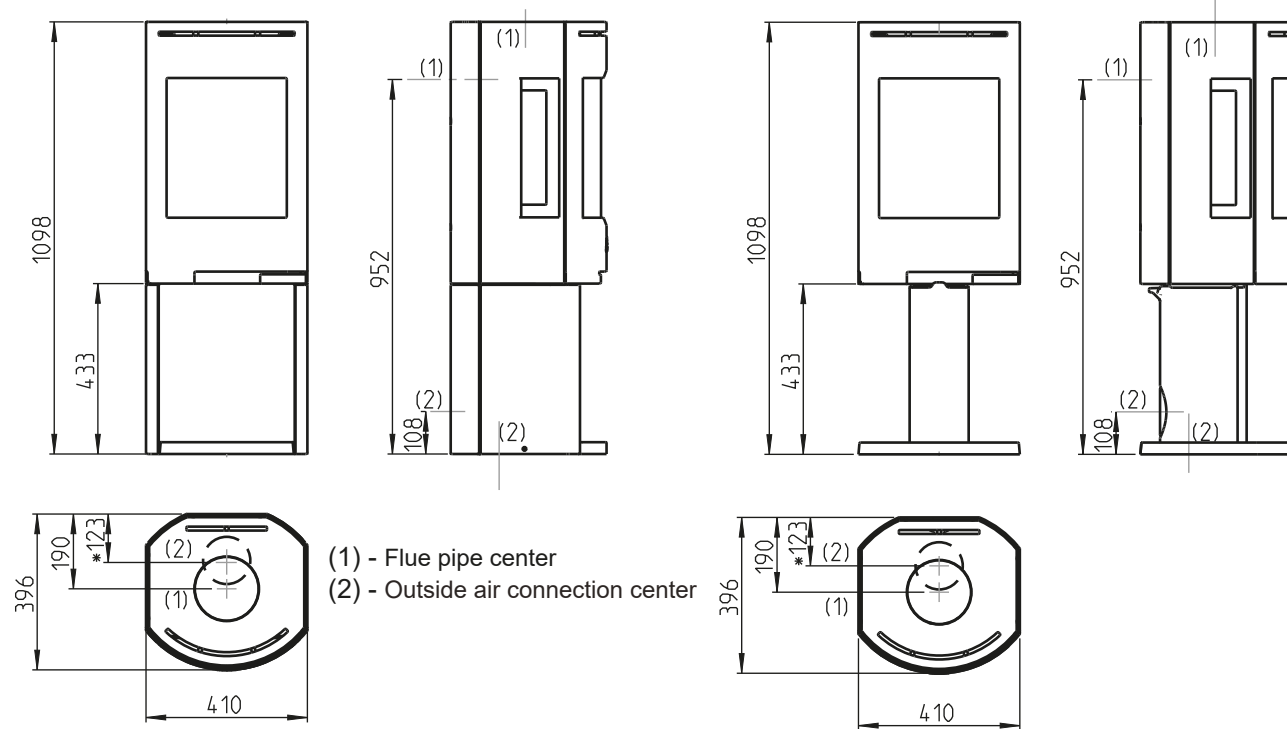


 
(1) - Flue pipe center
(2) - Outside air connection center

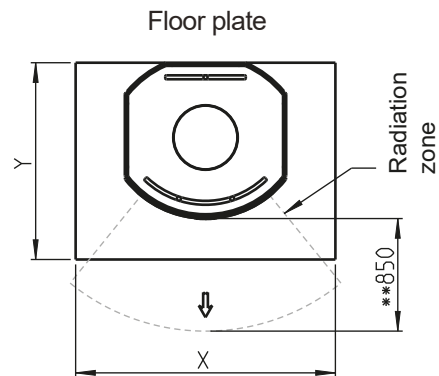

Min. measurements floor plate
X / Y = According to national laws and regulations

Combustible wall

  Min. distance to combustible wall

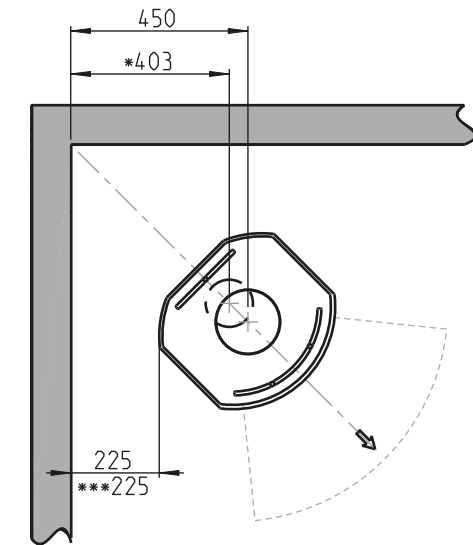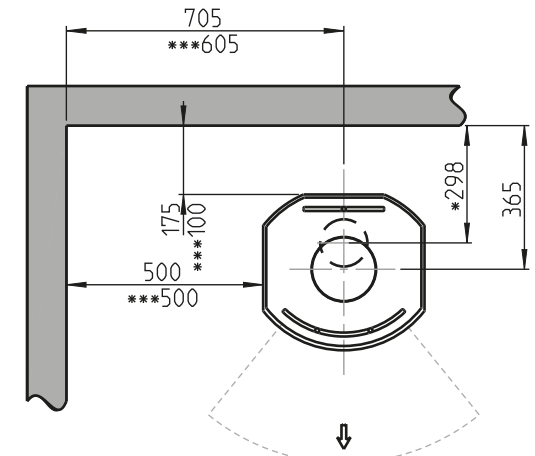

* Outside air connection

** Min. distance to furniture / combustible material


*** Distance to combustible wall with semi-insulated / shielded flue pipe

Fig. 1d


Jøtul F 130 Series

Jøtul F 135 / F 137 - min. distance to firewall

 External

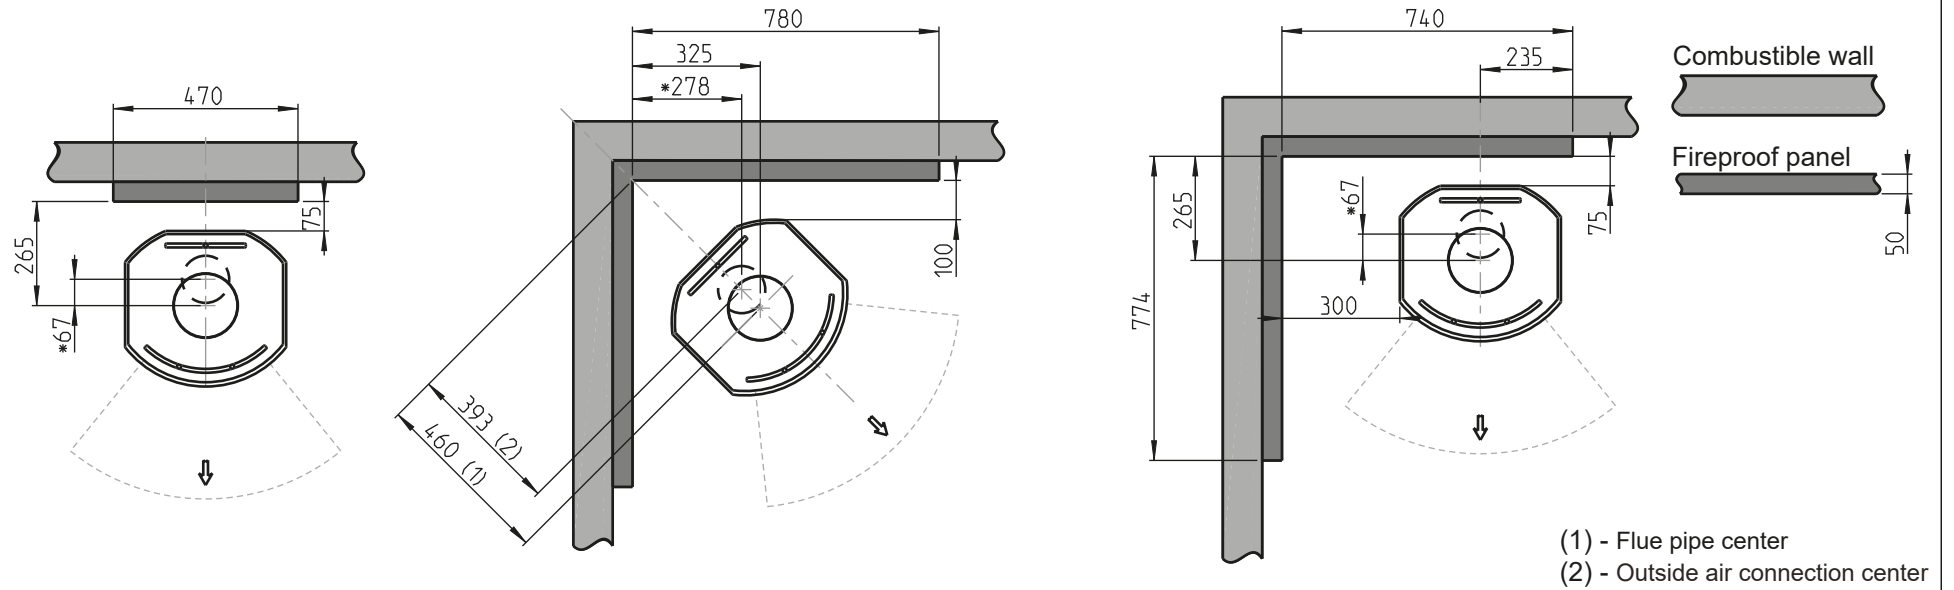

Integrated

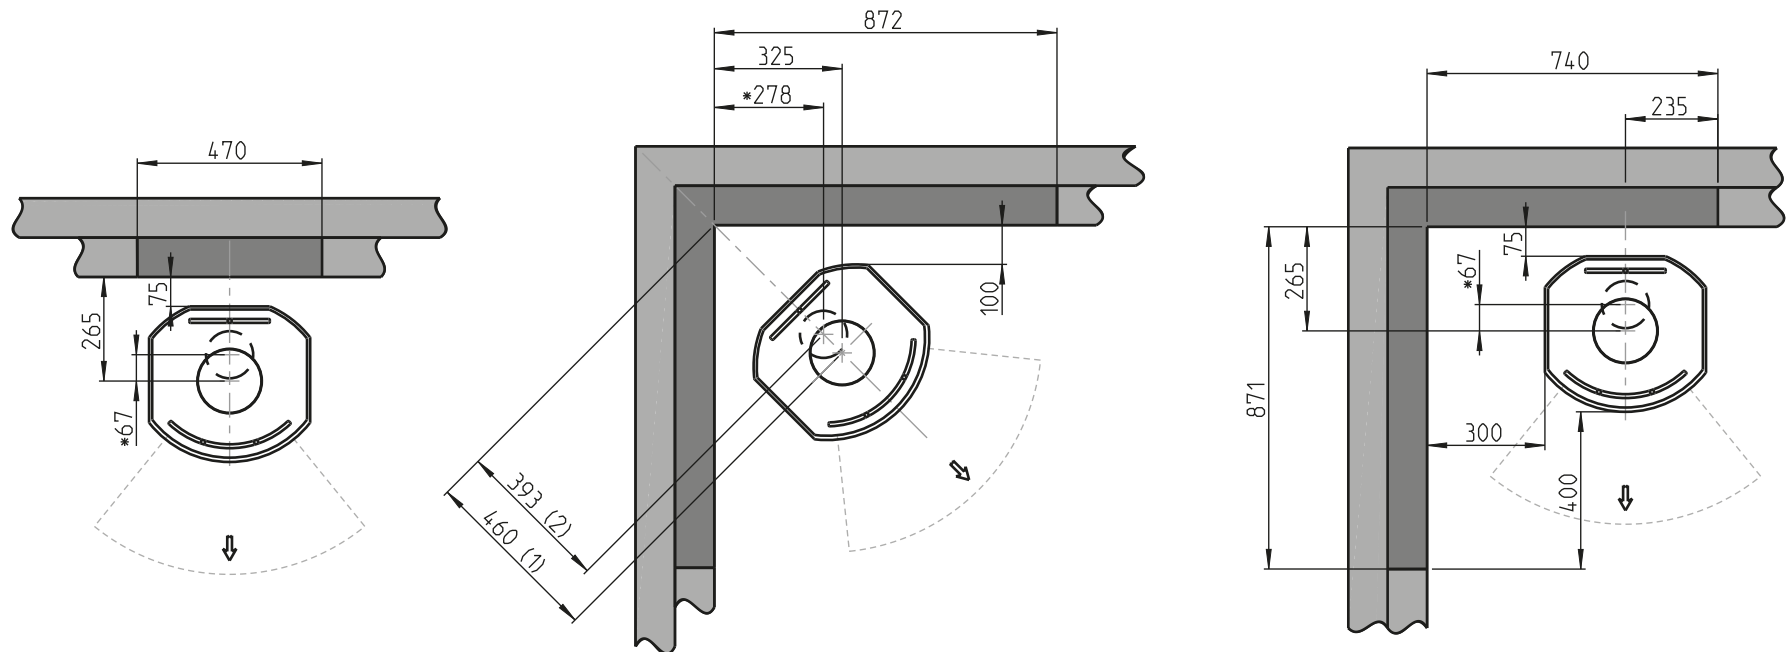 

* External air supply